



ART-BLOCKER-M


MANUAL ALLOY FREE LENSES BLOCKING

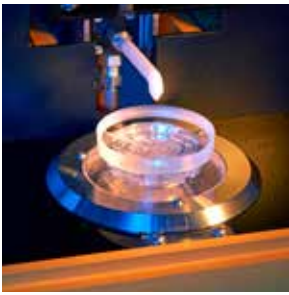

Dispensing of UV-curable adhesive

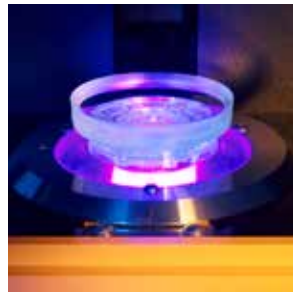

UV-curable adhesive connects lens blank & ART block-piece

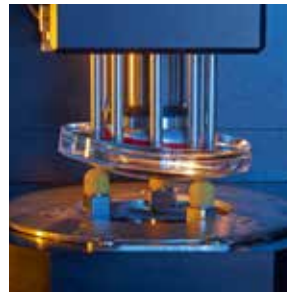

Block/Prism ring

ART-BLOCKER-M

Manual, compact, alloy-free lens blocking technology, easy to operate and maintain. The ART-Blocker-M employs reusable ART block-pieces and UV-curable adhesive to connect lens blank and block-piece for the surfacing process. It is the perfect solution for labs with low to mid volume manufacturing requirements.

FEATURES + BENEFITS

- Fast UV-curing process eliminates cooling time after blocking.
- A scanner interface enters job data automatically, simplifying operation and saving time.
- The work sequence is displayed on the screen, reducing operator errors.
- Prism rings help set the lens in the right position.
- A message on the monitor alerts the operator when the process is complete, avoiding breakage from stopping too early.

TECHNICAL SPECIFICATIONS

Productivity	Up to 50 lenses/hour
Working range	Blank diameter: 65 – 85 mm Blank thickness: up to 30 mm Plano up to +15 dpt base curve Prism up to 5° Progressives, multi-focals, single vision lenses
Lens material	All standard organic materials
Dimensions (wxdxh)	701 x 711 x 1696 mm 28 x 28 x 67 inches
Weight	210 kg / 463 lb



All technical data subject to change without notice. Verify details with Satisloh.

CONTACT

Satisloh AG
Neuhofstrasse 12
CH - 6340 Baar
Switzerland
Phone: +41 (0) 41766 16 16
Email: info@satisloh.com

www.satisloh.com

North America

Europe

Asia

Central & South America

Sales
Phone: +1 262 255 6001
Email: info.usa@satisloh.com
Phone: +49 (0) 6441 912 0
Email: info.de@satisloh.com
Phone: +852 27 56 7711
Email: info.asia@satisloh.com
Phone: +55 (11) 2930 8600
Email: info.latam@satisloh.com

Service
Phone: +1 262 255 6001
Email: service.usa@satisloh.com
Phone: +49 (0) 6441 912 222
Email: service.de@satisloh.com
Phone: +852 27 56 7654
Email: service.asia@satisloh.com
Phone: +55 (11) 2930 8600 (pt)
Phone: +57 300 798 3374 (es)
Email: service.latam@satisloh.com

satisloh®