


# ART-Glue-Detector

---

DETECTION OF GLUE RESIDUE AFTER DEBLOCKING

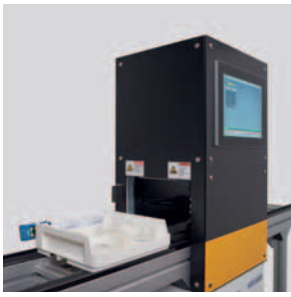

Analyze two lenses and two block pieces at once.

## ART-GLUE-DETECTOR

The ART-Glue-Detector, is an optional peripheral machine to detect any glue residue after deblocking, ensuring best lens quality.

### FEATURES + BENEFITS:

- After deblocking job tray is scanned and moves into the ART-Glue-Detector.
- Detection of glue residue via camera and image recognition software.
- Direct communication with LMS and MES.
- ART-Glue-Detector identifies the few lenses that require manual cleaning and allows the vast majority of lenses to proceed without any manual intervention.

#### Machine requirements:

- Special fluorescent UV-adhesive required
- Compatible with OPS and OPS premium block-pieces only
- Requires Satisloh job trays

## TECHNICAL INFORMATION

<b>Productivity</b>	Up to 300 jobs trays/hour
<b>Working Range</b>	Lens diameter 55 – 85 mm Lens thickness up to 30 mm Plano up to +15 dpt base curve Prism up to 5° Progressives, multi-focals, single vision lenses
<b>Lens materials</b>	All standard organic materials
<b>Dimensions (wxdxh)</b>	with conveyor: 1610 x 415 x 1815 mm / 64 x 17 x 72 inches
<b>Weight</b>	130 kg / 287 lb



All technical data subject to change without notice. Verify details with Satisloh.

## CONTACT

**Satisloh AG**  
 Neuhofstrasse 12  
 CH- 6340 Baar  
 Switzerland  
 Phone: +41 (0) 41766 16 16  
 Email: info@satisloh.com

www.satisloh.com

#### North America

#### Europe

#### Asia

#### Central & South America

**Sales**  
**Phone:** +1 262 255 6001  
**Email:** info.usa@satisloh.com  
**Phone:** +49 (0) 6441 912 0  
**Email:** info.de@satisloh.com  
**Phone:** +852 27 56 7711  
**Email:** info.asia@satisloh.com  
**Phone:** +55 11 2930 8600  
**Email:** info.latam@satisloh.com

**Service**  
 +1 262 255 6001  
 service.usa@satisloh.com  
 +49 (0) 6441 912 222  
 service.de@satisloh.com  
 +852 27 56 7654  
 service.asia@satisloh.com  
 +55 11 2930 8600 (pt)  
 +57 300 798 3374 (es)  
 service.latam@satisloh.com

**satisloh®**